


9.4 JOG DIAL SECTION

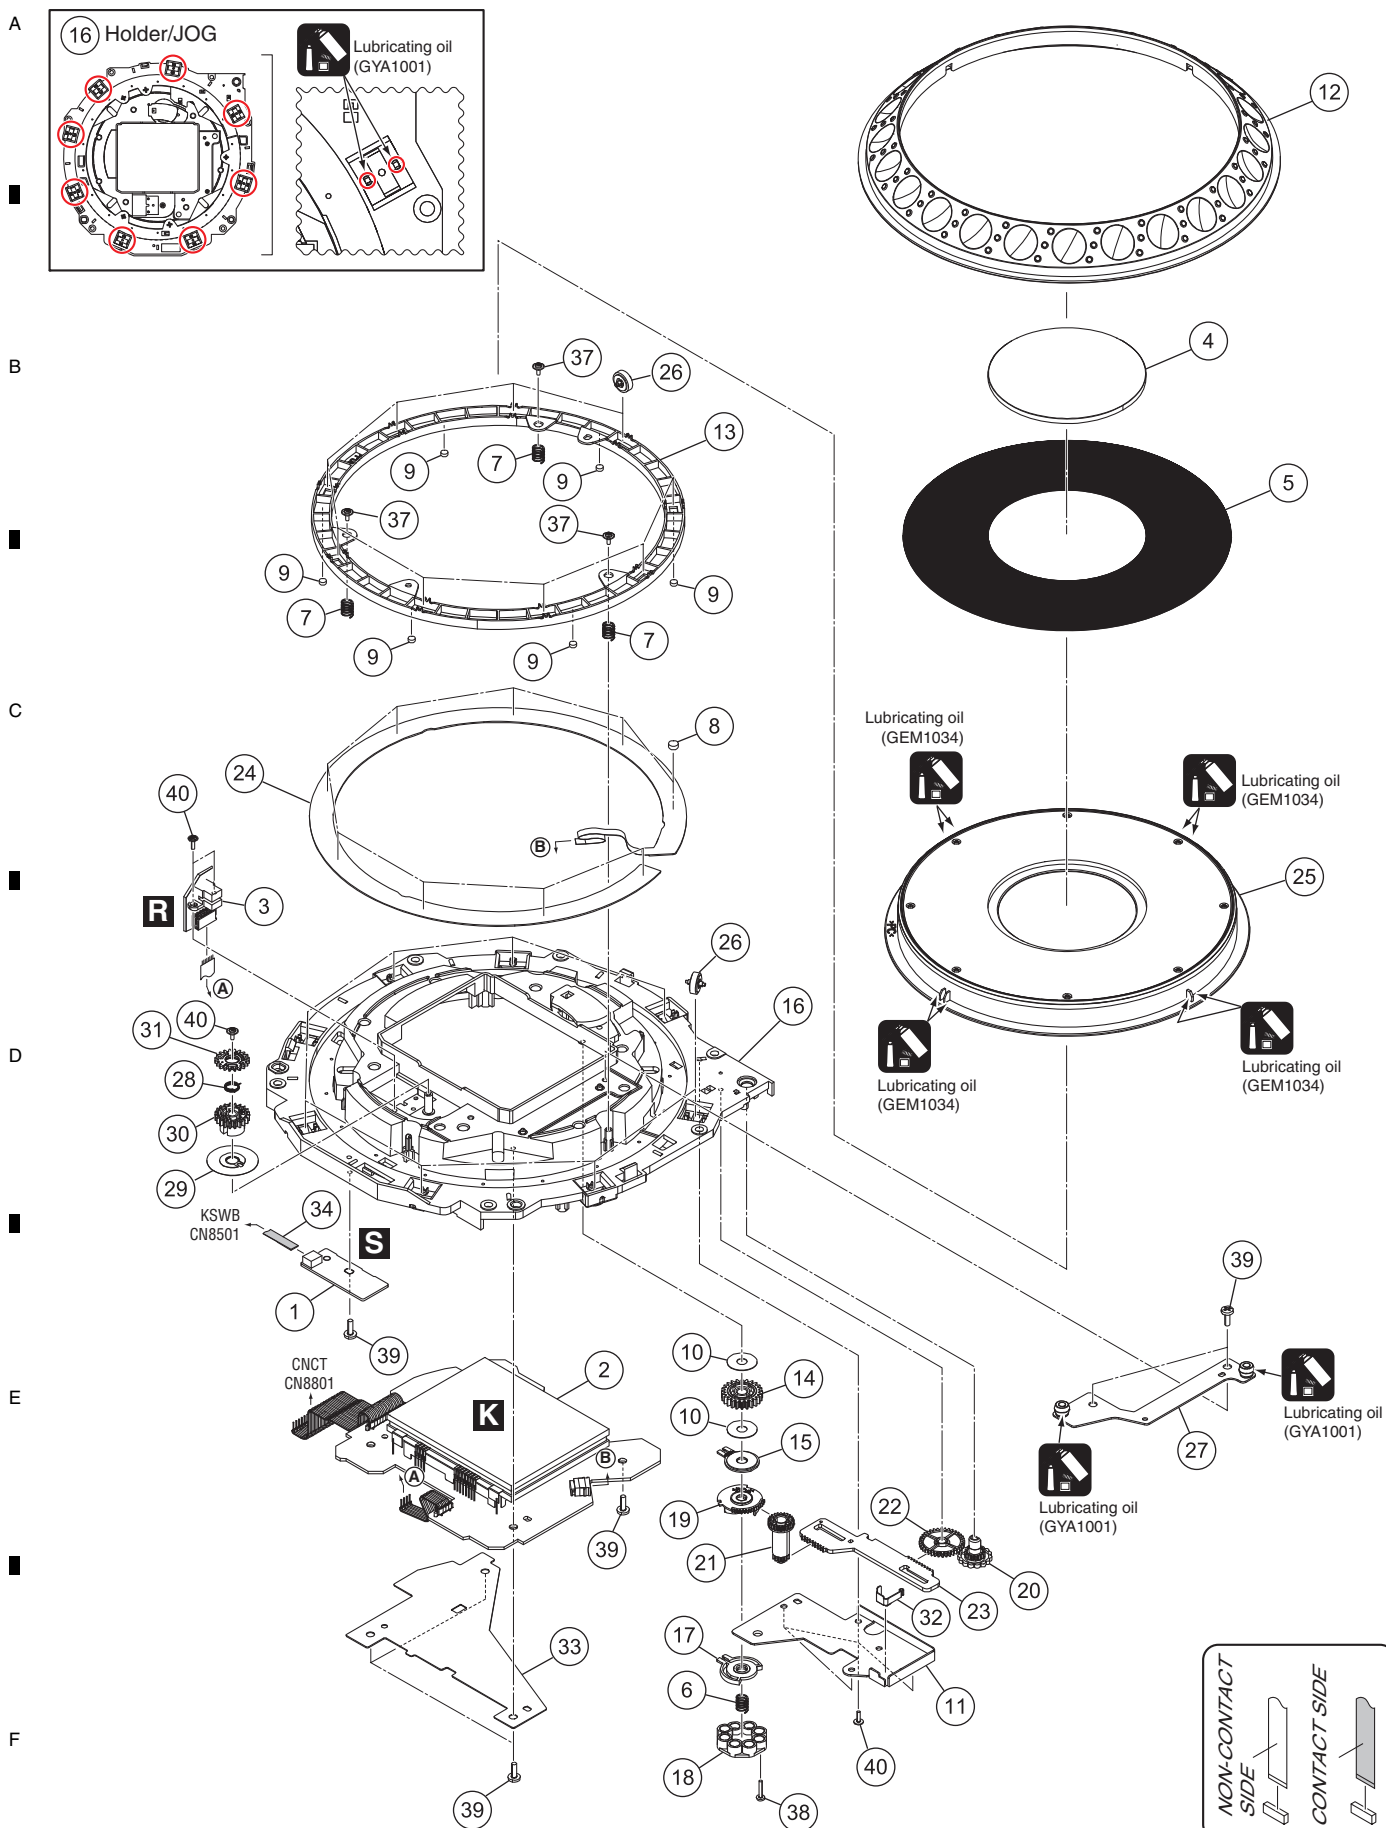

JOG DIAL SECTION PARTS LIST

Mark No.	Description	Part No.	
1	INDB Assy	DWX3337	
2	JFLB Assy	DWX3348	A
3	JOGB Assy	DWX3349	
4	JOG Panel	DAH2609	
5	Plate/JOG	DAH2907	
6	Coil Spring/LD	DBH1798	■
7	SW Spring	DBH1681	
8	SW Cushion HH48/2	DEC2538	
9	Cushion/RNG	DEC3466	
10	Washer	DEC3137	
11	Link Plate	DNH2848	B
12	JOG Dial/B	DNK6064	
13	SW Ring	DNK5233	
14	Gear/LD	DNK6145	
15	Smoother	DNK5237	■
16	Holder/JOG	DNK6138	
17	Comp Plate	DNK5243	
18	Adjust Plate	DNK5300	
19	Cam Plate	DNK5301	
20	Dial Gear	DNK5302	C
21	Link Gear A	DNK5303	
22	Link Gear B	DNK5304	
23	Rack Plate	DNK5305	
24	Sheet SW	DSX1078	
25	JOG Dial A Assy	DXA2159	■
26	Roller Assy/A	DXB2118	
27	Stay Assy/JOG	DXB2133	
28	Encoder Spring	DBH1710	
29	Encoder Plate	DEC2889	D
30	Gear/A	DNK6143	
31	Gear/B	DNK6144	
32	Leaf Spring/ADJ	DBK1376	
33	Barrier/JFL	DEC3419	■
34	FFC/4P	DDD1608	
35			
36			
37	Screw (FE)	DBA1265	
38	Screw	BPZ20P100FTC	E
39	Screw	BPZ30P080FNI	
40	Screw	IPZ20P060FTC	